

# Handleiding

# fasttel

Door Entry Systems

## FT600W IP monitor

(vanaf softwareversie 113.78.6.23)

(only for Wizard Serie+FT600SIP but not for the FT600KIT)



Fasttel behoudt zich het recht om de inhoud te veranderen zonder voorafgaande waarschuwing.

Fasttel België, Klipsenstraat 18A, 9160 Lokeren. Tel +32 (0)9 244 65 20 [info@fasttel.be](mailto:info@fasttel.be)  
Fasttel Nederland, Heiligenboom 3, 5066 CB Moergestel. Tel +31 (0)13 513 65 14 [info@fasttel.nl](mailto:info@fasttel.nl)


Deze handleiding is gemaakt op basis van Visuals om uw werk te vereenvoudigen.

De Fasttel FT600W is een IP monitor die direct wordt aangesloten op een POE aansluiting van uw netwerk.

De FT600 moet minimaal voorzien zijn van 2 zaken:

- 1 – SIP account waarmee deze zich moet registreren op een SIP server
- 2 – Monitor informatie op basis van de registratie van de Wizard en bijbehorende rtsp string

## 1. Inlog

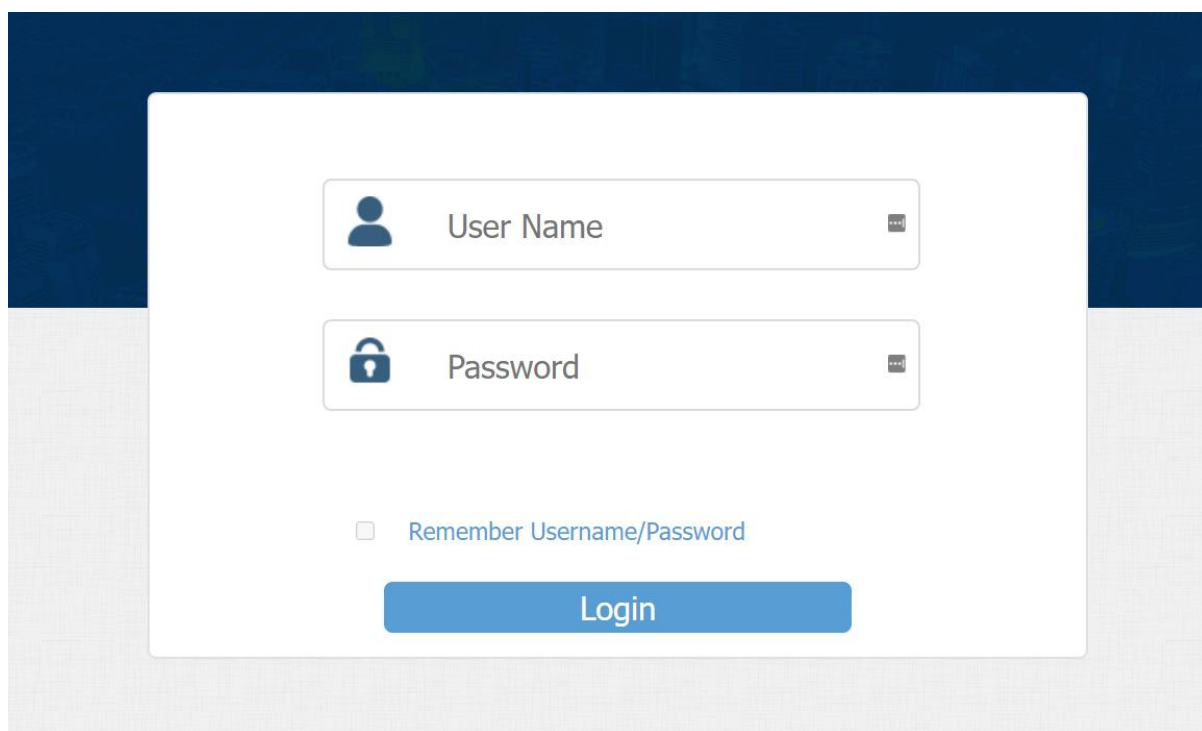

The screenshot shows a login form with the following elements:

- A "User Name" input field with a person icon on the left and a password visibility icon on the right.
- A "Password" input field with a lock icon on the left and a password visibility icon on the right.
- A checkbox labeled "Remember Username/Password".
- A blue "Login" button.

Inlog gegevens standaard: admin / AdminFasttel123!

Na de login komt u in het hoofdmenu waar u kunt kiezen uit de tabbladen links op het scherm

Let op: deze handleiding is alleen van toepassing als u deze **NIET** aansluit op de FT600VK(K)

## 2 – Tabblad Status

**fasttel**  
FT600W

**Status**

**Product Information**

Model	FT600W	MAC Address	0C11050FCC15
Firmware Version	113.78.7.5	Hardware Version	113.0.7.1.0.0.0.0
Location	Indoor Monitor	Room Number	1.1.1.1.1

**Network Information**

Network Type	LAN	LAN Port Type	DHCP Auto
LAN Link Status	Connected	LAN IP Address	192.168.10.180
LAN Subnet Mask	255.255.255.0	LAN Gateway	192.168.10.50
LAN DNS1	192.168.10.14	LAN DNS2	
Primary NTP	0.pool.ntp.org	Secondary NTP	1.pool.ntp.org

**Account Information**

Account1	203@192.168.10.187	Account2	None@None
	Registered		Disabled

Op dit tabblad kun u niets aanpassen maar deze pagina geeft vooral info over enkele statussen zoals:

Versie nummer van de software – kijk op onze website voor de laatste versie bij downloads/software

Netwerk connectie

Account registratie. Zonder “registered” zal de FT600 niet werken

## 3 – Tabblad Account / basis

**fasttel**  
FT600W

**Account**

**Account-Basic**

**SIP Account**

Status	Registered	Account	Account 1
Account Active	Enabled	Display Label	OM
Display Name	203	Register Name	203
User Name	203	Password	*****

**SIP Server 1**

Server IP	192.168.10.187	Port	45450
Registration Period	1800	(30~65535s)	

**Outbound Proxy Server**

Enable Outbound	Disabled		
Server IP		Port	5060
Backup Server IP		Port	5060

**TransportType**

TransportType	UDP
---------------	-----

Submit Cancel

Dit tabblad gaat alleen over de gegevens van uw sip account welke u hier in moet geven.

Als u de monitor alleen gebruikt als binnenpost van een Wizard Elite hoeft u outbound niet in te vullen

## 4 – Tabblad Account Advanced

**fasttel**  
FT600W

Status

Account

Basic

Advanced

Network

Phone

Contacts

Upgrade

Arming

Security

DeviceSetting

### Account-Advanced

SIP Account

Account: Account 1

#### Audio Codecs

Disabled Codecs

Enabled Codecs: PCMA, PCMU, G729, G722

#### Video Codecs

Disabled Codecs

Enabled Codecs: H264

#### DTMF

Type: RFC2833

How to info DTMF: Disabled

DTMF Payload: 101 (96~127)

#### Call

Min Local SIP Port: 5062 (1024~65535)

Max Local SIP Port: 5062 (1024~65535)

Auto Answer: Disabled

Prevent SIP Hacking: Disabled

Is escape non Ascii chara...: Enabled

In de basisconfiguratie staan deze gegevens reeds voorgeprogrammeerd. Voer geen factory default uit want dan zijn deze gewist.

## 5 – Network basic

The screenshot shows the 'fasttel FT600W' web interface. On the left is a navigation menu with options: Status, Account, Network (selected), Basic, Advanced, Phone, Contacts, Upgrade, and Arming. The main content area is titled 'Network-Basic' and contains a 'LAN Port' section. It has two radio buttons: 'DHCP' (checked) and 'Static IP' (unchecked). Below are input fields for 'IP Address', 'Subnet Mask', 'Default Gateway', 'LAN DNS1', and 'LAN DNS2'. At the bottom are 'Submit' and 'Cancel' buttons.


U kunt er voor kiezen om uw monitor een vast IP adres te geven. Hebt u hier geen verstand van kunt u het beter zo laten. Mocht u met een IP scanner gaan scanner dan vind u het apparaat met de naam: smartdophones.

## 6 – Network Advanced

The screenshot shows the 'fasttel FT600W' web interface. On the left is a navigation menu with options: Status, Account, Network (selected), Basic, Advanced, Phone, Contacts, Upgrade, and Arming. The main content area is titled 'Network-Advanced' and contains three sections: 'Local RTP' with 'Starting RTP Port' (11800) and 'Max RTP Port' (12000); 'Connect Setting' with 'Connect Type' (None), 'Discovery Mode' (Enabled), 'Device Address' (1.1.1.1), 'Device Extension' (1), and 'Device Location' (Indoor Monitor); and 'VLAN Setting' with 'VLAN' (Disabled), 'Priority' (0), and 'VLAN ID' (1). At the bottom are 'Submit' and 'Cancel' buttons.

Op deze pagina doet u geen aanpassingen

## 7 – Monitor-Time/Lang

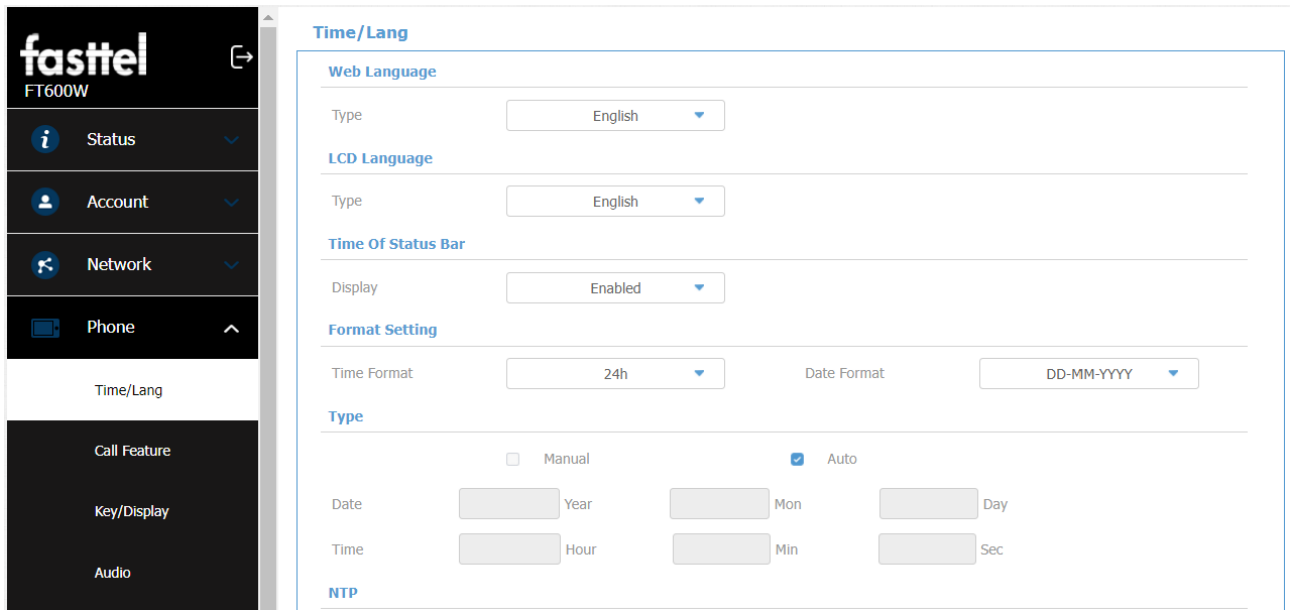


The screenshot shows the 'Time/Lang' configuration page in the fasttel FT600W web interface. The left sidebar contains navigation options: Status, Account, Network, Phone, Time/Lang (selected), Call Feature, Key/Display, and Audio. The main content area is titled 'Time/Lang' and includes the following settings:

- Web Language:** Type: English
- LCD Language:** Type: English
- Time Of Status Bar:** Display: Enabled
- Format Setting:** Time Format: 24h, Date Format: DD-MM-YYYY
- Type:**  Manual,  Auto
- Date:** [ ] Year, [ ] Mon, [ ] Day
- Time:** [ ] Hour, [ ] Min, [ ] Sec
- NTP:** (Section header)

In de basisconfiguratie hebben wij dit reeds goed gezet.

## 8 – Phone Call feature

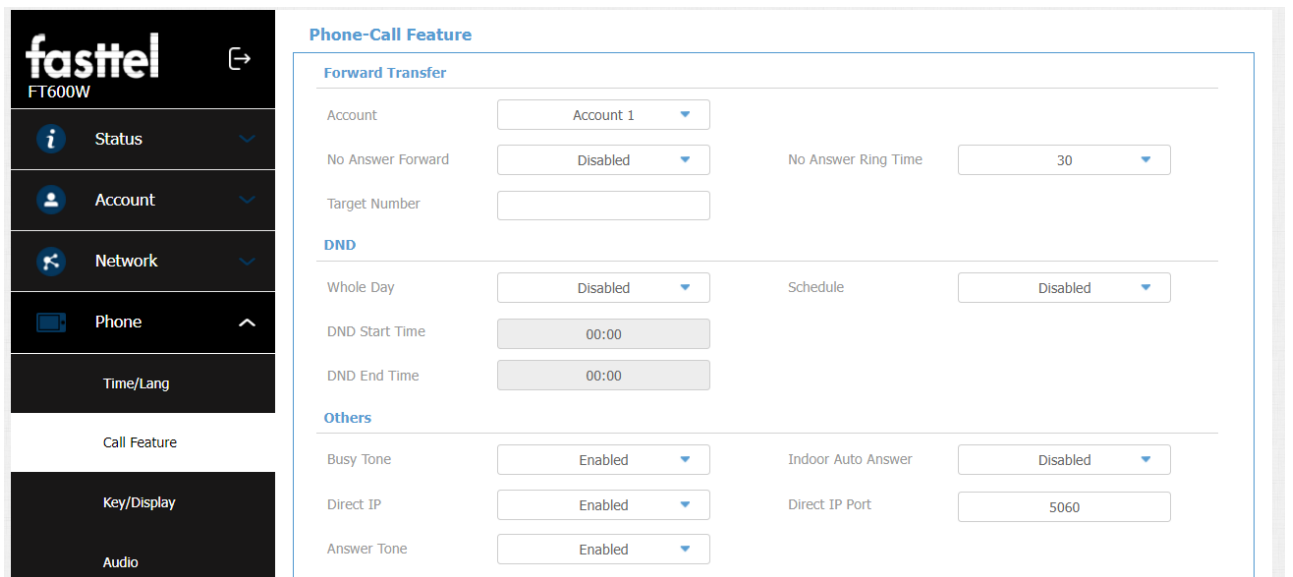

The screenshot shows the 'Phone-Call Feature' configuration page in the fasttel FT600W web interface. The left sidebar contains navigation options: Status, Account, Network, Phone, Time/Lang, Call Feature (selected), Key/Display, and Audio. The main content area is titled 'Phone-Call Feature' and includes the following settings:

- Forward Transfer:** Account: Account 1, No Answer Forward: Disabled, No Answer Ring Time: 30, Target Number: [ ]
- DND:** Whole Day: Disabled, Schedule: Disabled, DND Start Time: 00:00, DND End Time: 00:00
- Others:** Busy Tone: Enabled, Indoor Auto Answer: Disabled, Direct IP: Enabled, Direct IP Port: 5060, Answer Tone: Enabled

In de basisconfiguratie hebben wij dit reeds goed gezet.

## 9 – Key/Display

The screenshot shows the 'Key/Display' settings page for the fasttel FT600W. The left sidebar contains navigation options: Status, Account, Network, Phone, Time/Lang, Call Feature, Key/Display (selected), Audio, Multicast, and Display Setting. The main content area is titled 'Key/Display' and includes the following sections:

- Display**: Brightness is set to 5, and Sleep is set to 15s.
- Home Page Mode**: Home Page Mode is set to 'Call list simple'.
- Home Page Display**: A table with 6 rows (Area1 to Area6). Each row has a 'Type' dropdown and a 'Label' text input. Area1 and Area2 have 'NA' in the Type dropdown and 'N/A' in the Label input. Area3, Area4, Area5, and Area6 have 'Enabled' in the Type dropdown and empty Label inputs.
- More Page Display**: A section with an 'Example' button.

In de basisconfiguratie hebben wij dit reeds goed gezet.

## 10-Audio

The screenshot shows the 'Audio' settings page for the fasttel FT600W. The left sidebar contains navigation options: Status, Account, Network, Phone, Time/Lang, Call Feature, Key/Display, Audio (selected), Multicast, and Display Setting. The main content area is titled 'Audio' and includes the following sections:

- Ring Volume**: Volume is set to 8 (0~15).
- Talk Volume**: Volume is set to 8 (1~15).
- Mic Volume**: Volume is set to 8 (1~15).
- Touch Sound**: Touch Sound Enabled is set to 'Enabled'.
- All Ringtones**: Upload(Max Size: 250K) shows 'Not selected any files' with a 'Select File' button. Below this, there are three dropdown menus for Ringtones and Door Unit Ring Tones, both set to 'Ring1.wav'. A 'Delete' button with a trash icon is visible next to the Ringtones dropdown. At the bottom, there are 'Submit' and 'Cancel' buttons.

De audio settings staan zo juist. Het kan zijn dat de omgeving aanleiding geeft voor meer of minder volume of microfoon geluid. Dan kunt u dat hier aanpassen of op het scherm bij "Sound"

Het tabblad Multicast slaat u gewoon over.

## 11 – Display Setting

**Display Setting**

**Screen Saver Setting**

Picture Files

(The newly uploaded screen saver picture file will replace the selected picture.)

Screen Saver Pictures

(Max size:600K; format:800\*480 jpg;File name can only contain digits,letters and\_)

Screen Saver Type

In de basisconfiguratie hebben wij dit reeds goed gezet.

Tabblad

XX – Phone - Intercom en

XX – Phone Logo

hebben geen functie is deze configuratie. Dus niets mee doen



## 12- Phone-Monitor

**Monitor**

**Door Phone**

<input type="checkbox"/>	Index	Number	Name	URL	User Name	Display
<input type="checkbox"/>	1	50	Voordeur	rtsp://192.168.10.188:8554/camera	8597Opbergen	Disabled
<input type="checkbox"/>	2					
<input type="checkbox"/>	3					
<input type="checkbox"/>	4					
<input type="checkbox"/>	5					
<input type="checkbox"/>	6					
<input type="checkbox"/>	7					
<input type="checkbox"/>	8					
<input type="checkbox"/>	9					
<input type="checkbox"/>	10					

Delete Delete All

Device Number Device Name

RTSP Address User Name

Password Display in Call Disabled

+ Add Edit Cancel

**Monitor Import/Export**

Import(.xml) Not selected any files Select File Import Cancel

Export Export

Op deze pagina gaat u de camera gegevens invullen welke nodig zijn om met uw intercom te communiceren.

In alle gevallen behalve bij gebruik van de Wizard Apartment moet u bovenstaande RTSP link gebruiken. De juiste gegevens treft u aan op het camera tabblad van de intercom welke u gebruikt.

Evenals de naam en wachtwoord die u daar ingevuld heeft.

Wij adviseren u dringend om dit niet leeg te laten.

Wilt u in een account iets veranderen dan vinkt u de juiste index aan en past e.e.a. aan de onderzijde aan en saved dit.

## 13 – Phone Relay

**Phone**

- Time/Lang
- Call Feature
- Key/Display
- Audio
- Multicast
- Display Setting
- Intercom
- Logo
- Monitor
- Relay**

**Relay**

**Relay Setting**

Local Relay

DTMF:

Relay Interval:  Relay Type:

Remote Relay

DTMF:

DTMF Code1:

DTMF Code2:

DTMF Code3:

**Remote Relay By HTTP**

Index	IP/SIP	URL	UserName
<input type="checkbox"/> 1			
<input type="checkbox"/> 2			
<input type="checkbox"/> 3			
<input type="checkbox"/> 4			
<input type="checkbox"/> 5			

1/1   1

IP/SIP:  URL:

UserName:  Password:

Zonder Webrelais hebben wij hier alle instellingen al goed staan. Maakt u gebruik van een WEB relais dan geeft u de gegevens in van het webrelais

Tabblad

XX – Phone Lift &

XX – Phone smartliving

wordt niets mee gedaan in deze configuratie

## 14 – Local Contacts

**fasttel**  
FT600W

- Status
- Account
- Network
- Phone
- Contacts

Local Contacts

- Call Log
- Upgrade
- Arming
- Security
- DeviceSetting

### Local Contacts

#### Contacts List Setting

Contacts Sort By: Default | Show Local Contacts Only: Enabled

#### Local Contacts List

Contact: All Contacts

Search: [ ] Search Reset

Dial: [ ] Auto Dial Hang Up

Index	Name	Number 1	Number 2	Group	Ring	Account
<input type="checkbox"/> 1	OM	203		Default	Auto	Account1
<input type="checkbox"/> 2	Reclasing	201		Default	Auto	Account1
<input type="checkbox"/> 3	Voogdijschap	202		Default	Auto	Account1
<input type="checkbox"/> 4						
<input type="checkbox"/> 5						
<input type="checkbox"/> 6						
<input type="checkbox"/> 7						
<input type="checkbox"/> 8						
<input type="checkbox"/> 9						
<input type="checkbox"/> 10						

Delete Delete All Prev 1/1 Next MoveTo All Contacts 1 Page

#### Contact Setting

Name: [ ] Number 1: [ ]

Number 2: [ ] Group: Default

Ring: Auto Account: Auto

+ Add Edit Cancel

Deze pagina kan van belang zijn als u meerdere binnenpost hebt. U kunt hier dan mee communiceren.

Vul alleen de naam en het nummer van het toestel in. Deze gegevens dienen uit uw SIP server (FT3000) te komen.

## 15 – Update Basic

The screenshot shows the 'fasttel FT600W' web interface. On the left is a navigation menu with options: Status, Account, Network, Phone, Contacts, Upgrade (selected), Basic, Advanced, and Arming. The main content area is titled 'Upgrade-Basic' and displays the following information:

Firmware Version	113.78.7.5	Hardware Version	113.0.7.1.0.0.0.0
Upgrade	<input type="text" value="Not selected any files"/> <input type="button" value="Select File"/>	<input type="button" value="Submit"/>	<input type="button" value="Cancel"/>
Reset To Factory Setting	<input type="button" value="Submit"/>		
Reset Config To Factory Setting	<input type="button" value="Submit"/>		
Reboot	<input type="button" value="Submit"/>		

Als er een Update bestaat die hoger is als deze dan treft u deze aan op onze websites onder downloads / software


## 16 – Update Advanced

The screenshot shows the 'fasttel FT600W' web interface. On the left is a navigation menu with options: Status, Account, Network, Phone, Contacts, Upgrade, Basic, Advanced (selected), Arming, Security, and DeviceSetting. The main content area is titled 'Others' and displays the following information:

Config File(.tgz/.conf/.dmg)	<input type="text" value="Not selected any files"/> <input type="button" value="Select File"/>
	<input type="button" value="Export"/> (Encrypted)
	<input type="button" value="Import"/> <input type="button" value="Cancel"/>

Hier kunt u bestaande configuraties up- de downloaden

## 17 – Security Basic

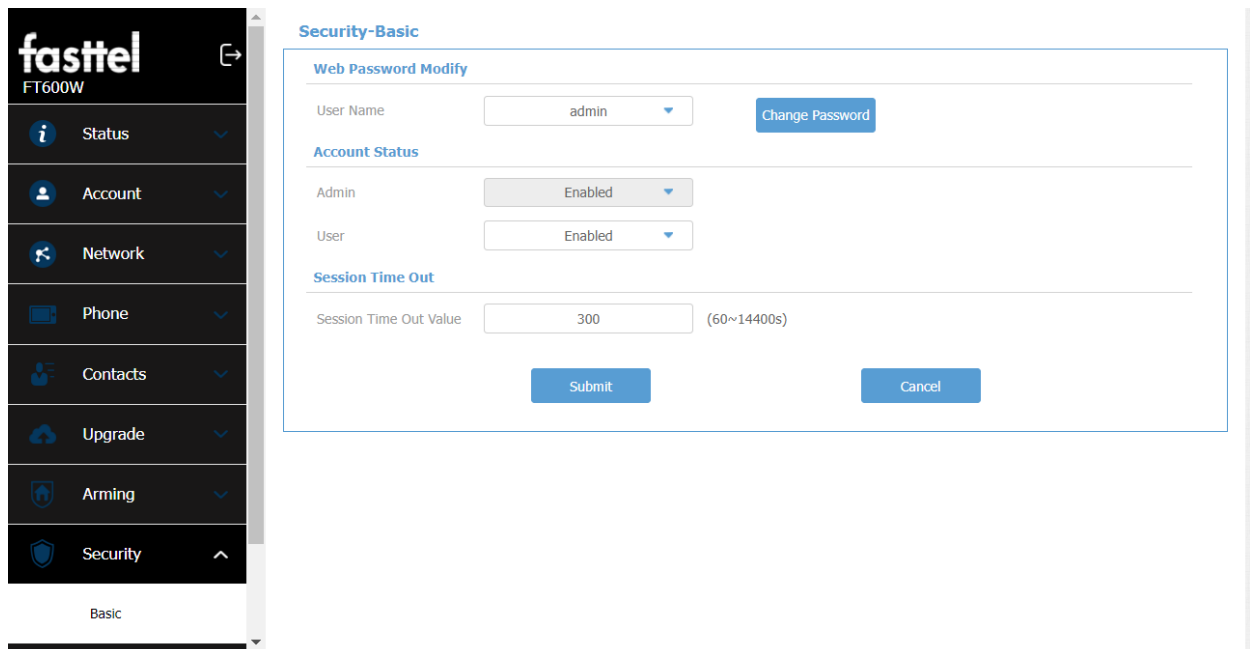


The screenshot shows the 'fasttel FT600W' web interface. On the left is a dark sidebar with menu items: Status, Account, Network, Phone, Contacts, Upgrade, Arming, and Security (which is expanded to show 'Basic'). The main content area is titled 'Security-Basic' and contains three sections:

- Web Password Modify:** A form with 'User Name' set to 'admin' and a 'Change Password' button.
- Account Status:** Two dropdown menus, 'Admin' and 'User', both set to 'Enabled'.
- Session Time Out:** A form with 'Session Time Out Value' set to '300' (with a note '(60~14400s)') and 'Submit' and 'Cancel' buttons.

In de basisconfiguratie hebben wij dit reeds goed gezet.

## 18 – Security Advanced

Tabblad Security advanced wordt niet gebruikt in deze configuratie

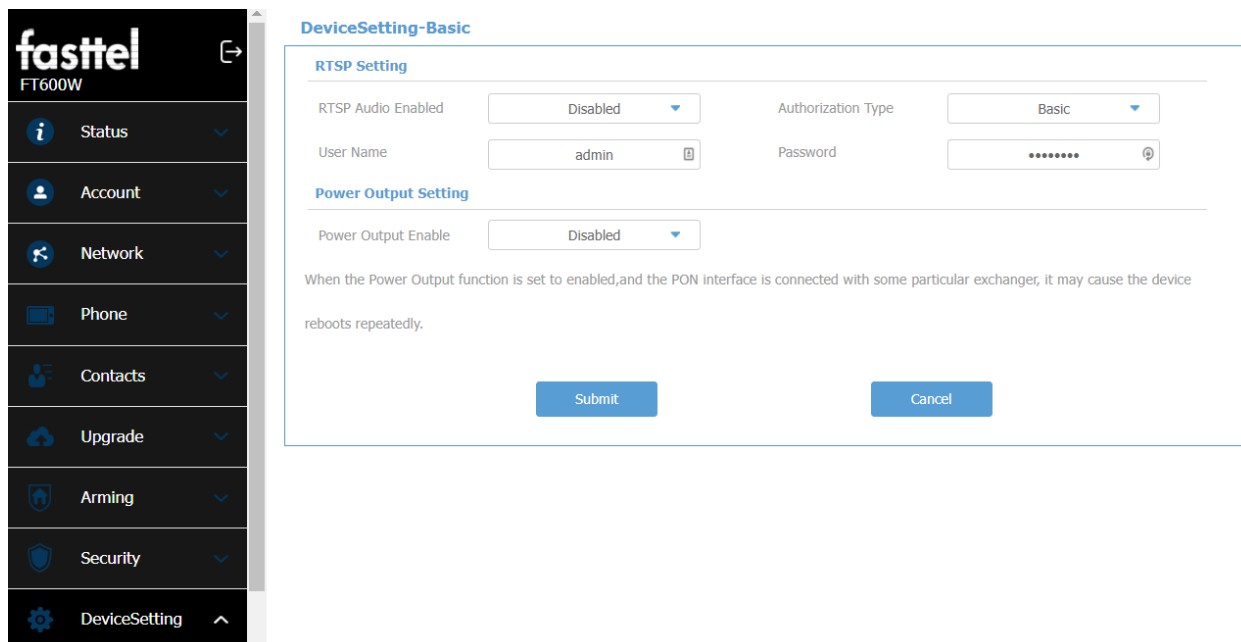

The screenshot shows the 'fasttel FT600W' web interface. On the left is a dark sidebar with menu items: Status, Account, Network, Phone, Contacts, Upgrade, Arming, Security, and DeviceSetting (which is expanded to show 'Basic'). The main content area is titled 'DeviceSetting-Basic' and contains two sections:

- RTSP Setting:** A form with 'RTSP Audio Enabled' set to 'Disabled', 'Authorization Type' set to 'Basic', 'User Name' set to 'admin', and a 'Password' field with masked characters.
- Power Output Setting:** A form with 'Power Output Enable' set to 'Disabled'. Below this is a warning text: 'When the Power Output function is set to enabled, and the PON interface is connected with some particular exchanger, it may cause the device reboots repeatedly.' and 'Submit' and 'Cancel' buttons.

Tabblad Device settings wordt niet gebruikt in deze configuratie